

Arcade Handshower and Hose

US-ARC31

Installation Instructions





Introduction

This handshower is suitable for use with all water systems up to a maximum operating pressure of 72 psi, beyond which pressure reducing valves must be installed.

The minimum water pressure requirement is 3 psi.

The handshower has been fully inspected throughout the production process and only leaves our factory after a 15-step QC process. Carefully remove the handshower from the box and check that all

parts have been supplied.

Before beginning installation, check for any damage that may have occurred during transport. Note: Damage claims cannot be made during or after installation.

Improper installation shall result in loss of warranty in case of damage caused by impacts or rubbing against rough surfaces.

IMPORTANT: Please read these instructions carefully before you begin and retain for future reference.

We do not accept responsibility for any problems that may occur through incorrect installation.

Installation notes


NOTES: The installation must comply with all plumbing codes including local codes and be installed by a licensed plumbing contractor.

WARNING! Before installing a new handshower it is essential that you thoroughly flush through the supply pipes in order to remove any remaining debris, solder or other impurities. Failure to carry out this simple procedure can cause problems or damage to the working of the handshower.

Installing isolating valves to the inlet feeds is recommended for ease of maintenance.

INSTALLATION: Turn off the main water supply before connecting to any existing pipe work or doing any maintenance. WARNING! Please check for any hidden pipes and cables, electric or otherwise, before drilling holes in a wall.

Tools required













Cross head screwdriver



Dimensions

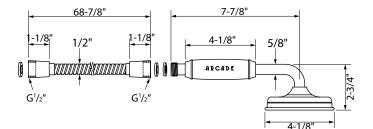



1 Installation

- Shut off the water heating system. Then, with the main water supply **turned off**, open the lowest hot and cold faucets and allow to drain until supply pipes are empty.
- Identify all components before fitting.
- Insert a washer and the filter into one end of the hose, then connect it to the handshower.
- Insert a washer into the other end of the hose, then connect it to the outlet.

ATTENTION; Check all new connections for leaks.

- Turn on the main water supply, close all faucets except for the new handshower and, as the system refilled, check for leaks.
- Once satisfied there are no leaks, switch on the heating system.

2 Maintenance

Care

- Clean surfaces gently with a soft, damp cloth using mild soap.
- We DO NOT recommend using any household cleaners as many can cause damage to the finish

