

Taos Pressure-balance Shower Set Trim 17-15-T 17-15-T75-T


Installation Instructions







Tools You Will Need




For ease of installation you will need:

- To read the installation instructions completely before beginning.
- To read all warnings, care, and maintenance information.
- To complete the valve rough-in prior to installing this trim kit.

Before beginning installation, check for any damage that may have occurred during transport. Note: Damage claims cannot be made during or after installation.




17-15-T 17-15-175-T

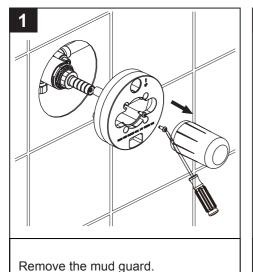


Installation Instructions


Carefully slide the escutcheon on valve.

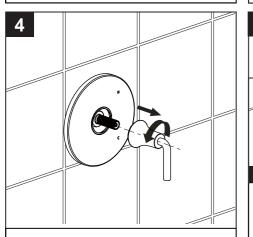

If the handle assembly will not engage the stem, remove the handle assembly.

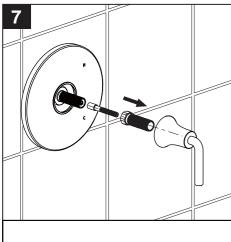


Remove the handle assembly and nipple and stem extensions.

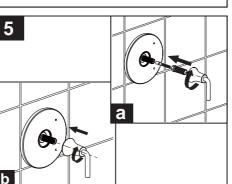


a.) Add the threaded nipple andpressure balance stem extensions.b.) Attach handle assembly.

c) If all functions smoothly go to step #10. If the handle assembly will not bottom out on the escutcheon go to step #6.

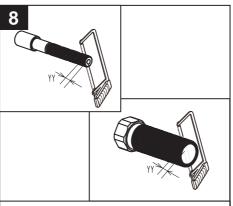


Cut stem and nipple extensions the amount noted in step # 6. (Never cut the stem and nipple while still on the valve. This may damage the valve.)

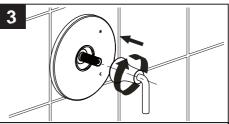


Place the handle assembly on the valve and rotate clockwise securing the handle assembly and escutcheon to the wall and engaging the stem. - If all functions smoothly go to step #10.


If the handle assembly will not engage the stem, go to step #4.
If the handle assembly will not bottom out on the escutcheon go to step #6.

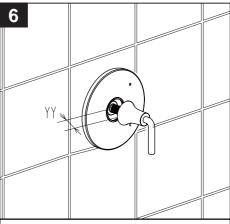

Measure and note the distance 'YY' (the distance between the bottom of the handle assembly and the escutcheon).

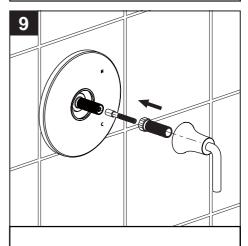

Re-install the nipple and stem extension and handle assembly.

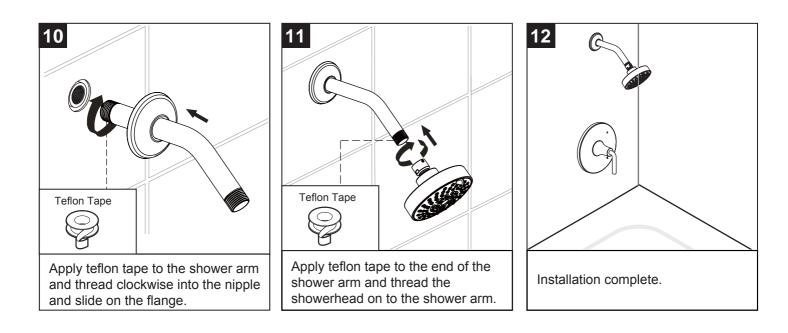

Replacement Parts


NO.	Description	Part No.	
1	Threaded Nipple Extension	5T1C0319NT	
2	Pressure Balance Stem Extension	5P0C0582NT	
3	Handle Assembly	9Q1146	
	H		


Applicable Standards/Codes

IAPMO certified to meet or exceed the following:

- ASME A112.18.1/CSA B125.1
- Uniform Plumbing Code
- National Plumbing Code of Canada
- EPA WaterSense (17-15-T)
- ADA Compliant

Installation Dimensions

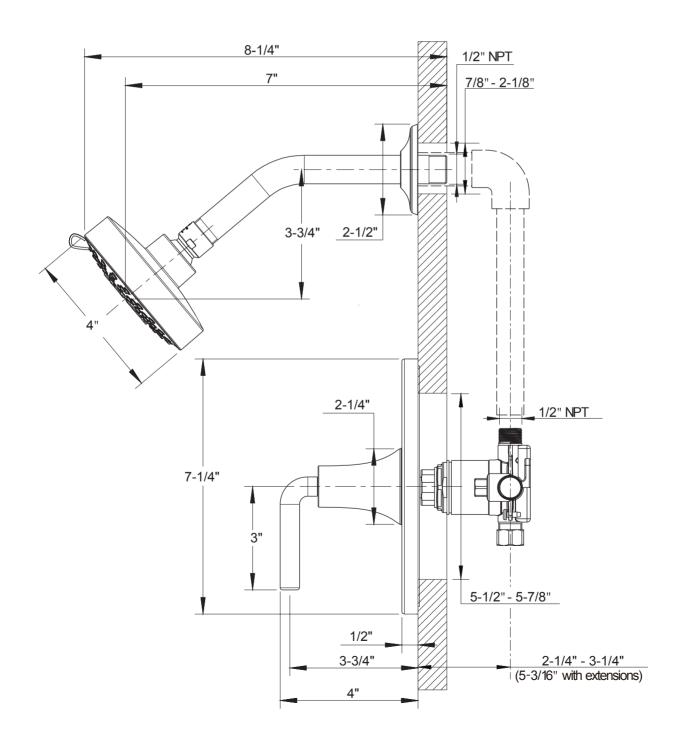



17-15-T





Cleaning Instructions

Rinse away any traces of soap and gently dry with a clean, soft cloth after each use. Rinse completely with water and dry any overspray. This will maintain the finish and avoid water spotting.

To remove mineral deposits, use a 50/50 solution of white vinegar and water. Do not allow the solution to soak on the product.

Simichrome Polish® contains a protective film to enhance maintenance and is helpful in preventing water spot buildup. Follow instructions to ensure optimum results.

Never use an abrasive material such as a brush or scouring pad to clean the surface. The use of abrasive cleaners, cleansers or disinfectants will alter the surface finish and void the warranty.

Do not allow certain materials such as toothpaste, cologne, shaving cream, nail polish remover, vinegar, wine, drain and glass cleaners to remain on the surface. Prolonged contact will alter surface finishes and void the warranty.

We DO NOT recommend using any household cleaners as many can cause damage to the finish.

Please see the website for care instructions for specific finishes.

Warranty - This Crosswater London product is covered by a limited lifetime warranty. For full details, terms and conditions please visit our website.For further information contact:Crosswater London, 393 Fortune Blvd., Milford, MA 01757www.crosswaterlondon.comToll free number:844-XWATER-1 (844-992-8371)tel: 508-381-0433fax: 508-381-6068email: technical@crosswaterlondon.com